 
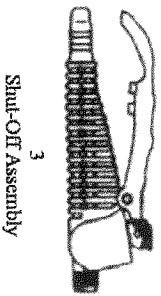 
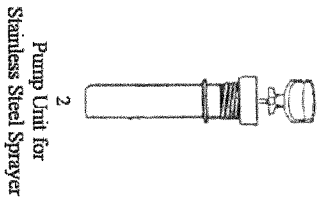 


2 Gallon Model
3 Gallon Model

Weed Defeat
Insecticide Sprayer
Industrial Sprayer
Acid Sprayer
Stainless Steel

CAUTION:
FOR SAFE USE OF THIS PRODUCT READ AND FOLLOW ALL INSTRUCTIONS BEFORE USE.
●OPERATING INSTRUCTIONS
●REPAIR PARTS

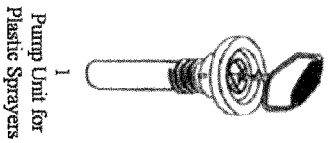

5
Spray Tip
Pin to Cone

6
Fan Tip and Tip Cap

7
Hose Assembly

Check Valve	Viton Diaphragm
(2) Stainless Steel Nuts	Backup Washer
Stainless Steel Washer Lock	Disc Cup Galvanized
Polypropylene Cup Spring	Viton Gasket
(2) Viton O-Rings	Grease Pack

8 or 9
Parts Kit

Item	Part Number	Description	Weed Defeat	Insecticide	Industrial	Acid Sprayer	Stainless Steel
1	S69001	Pump Unit for Plastic Sprayers	•	•	•	•	•
2	S70401	Pump Unit for Stainless Steel					•
3	S71701	Shut Off Assembly	•	•	•	•	•
4*	S72001	Plastic Extension 18 in.				•	
4*	S78901	Brass Extension 12 in.	•	•	•		•
4*	S73001	Brass Extension 18 in.	•	•	•		•
5	S73801	Spray Tip Pin to Cone	•	•	•	•	•
6	S74801	Fan Tip and Tip Cap	•	•	•	•	•
7	S75901	Hose Assembly 40 in. w/2 clamps	•	•	•	•	•
8	S76801	Parts Kit Plastic Sprayers	•	•	•	•	
9	S77901	Parts Kit Stainless Steel Sprayer					•

*All extensions are interchangeable with all units.

CAUTIONS FOR SAFE OPERATION

Read Owner's Manual completely before operating this sprayer.
Always wear safety goggles, gloves and protective clothing while using this sprayer.
Do not leave sprayer in the sun when not in use.
Never use flammable liquids in this tank.
Never store spray material in this tank.
Always release pressure when sprayer is not in use and before removing pump from tank.
Read and follow all instructions and cautions on label of chemical spray material to be used.
Clean and rinse sprayer thoroughly after each use.
Never attempt to alter sprayer from original condition.
Always use replacement parts from original manufacturer



WARNING

IMPROPER USE OR FAILURE TO FOLLOW INSTRUCTIONS CAN RESULT IN EXPLOSIVE FAILURE WITH MAJOR INJURIES. FOR SAFE USE OF THIS PRODUCT, YOU MUST READ AND FOLLOW ALL INSTRUCTIONS BEFORE USE.

PRE-USE SPRAYER SAFETY INSPECTION:

1. Check tightness of hose clamp with screwdriver to be sure hose is securely attached to the tank outlet nipple.
2. Inspect hose for deterioration, cracks, softness or brittleness. If any of these conditions are found, replace hose before using. Replace with original manufacturer's parts only.
3. Remove pump (SEE PRESSURE RELEASE INSTRUCTIONS.)
4. Inspect interior and exterior of tank for signs of deterioration (i.e. rust, cracks, bubbling and/or pitting) of body and bottom. Any sign of deterioration indicates possible tank weakening and could result in explosive bursting under pressure. If any of these signs are found, DISCARD TANK IMMEDIATELY AND REPLACE.

CAUTION: DO NOT ATTEMPT TO PATCH LEAKS, ETC. AS THIS COULD RESULT IN SERIOUS INJURY.

5. For pressure testing and sprayer use familiarization. FOLLOW FILLING INSTRUCTIONS EXCEPT: Use water only.
6. FOLLOW PRESSURIZATION INSTRUCTIONS EXCEPT, pump plunger only 8-10 strokes and inspect for leaks.
7. After inspection is completed, pump plunger until it works hard and lock handle.
8. (FOLLOW SPRAYING INSTRUCTIONS) verify desired spraying patterns and practice spraying.
9. If unit passes this test, release pressure (SEE PRESSURE RELEASE INSTRUCTIONS.)
10. Empty tank.
11. PROCEED WITH FILLING, PRESSURIZING AND SPRAYING INSTRUCTIONS WITH DESIRED CHEMICAL SOLUTION.

WARNING

NEVER SPRAY FLAMMABLE MATERIALS. ALWAYS READ CHEMICAL LABEL BEFORE FILLING SPRAYER AS SOME CHEMICALS MAY BE HAZARDOUS WHEN USED WITH THIS SPRAYER.

FILLING INSTRUCTIONS:

1. To engage handle in lock position: Push handle down to completely compress spring and rotate handle 1/4 turn clockwise, then allow handle to raise into lock position.
2. To remove pump engage handle in locked position and turn pump handle counterclockwise.
3. Prepare spray solution following directions on chemical container label.
4. Strain solution to remove foreign particles which can clog sprayer nozzle.
5. Fill tank to indicated or desired useable capacity, leaving remaining space for compressed air (SEE FRONT PAGE OF MANUAL FOR THE MAXIMUM USEABLE CAPACITY).
6. Check pump barrel to be sure no dirt or grass is stuck to barrel.
7. Place pump into tank opening and rotate clockwise until tightly locked and sealed into tank opening.

PRESSURIZING INSTRUCTIONS:

1. Disengage handle from locked position by pushing down and turning 1/4 turn counterclockwise to release handle.

CAUTION: TO PREVENT EJECTED PUMP ASSEMBLY AND/OR SOLUTION FROM STRIKING AND INJURING YOU, NEVER STAND WITH FACE OR

BODY OVER TOP OF TANK WHEN PUMPING OR LOOSENING PUMP.

CAUTION: NEVER PRESSURIZE SPRAYER BY ANY MEANS OTHER THAN THE ORIGINAL PUMP.

2. TO PRESSURIZE TANK, pump plunger up and down until it works hard.
3. Engage handle in lock position.

WARNING

THIS SPRAYER IS NOW UNDER PRESSURE AND DANGEROUS.



SPRAYING INSTRUCTIONS:

1. Always wear protective goggles, gloves, long sleeve shirt, long pants and sturdy foot protection.
2. Point nozzle away from you.
3. Squeeze shut-off handle to open and adjust nozzle to desired spray pattern by rotating nozzle cap (not complete nozzle) clockwise from fine spray to solid stream (maximum 2 turns).



WARNING

TURNING NOZZLE CAP TOO FAR WILL RESULT IN CAP FLYING OFF ALLOWING SPRAY MATERIAL TO SPRAY BACK ON YOU.
Re-pump unit as required to maintain spray force.



CAUTION: Do not leave a pressurized sprayer in the hot sun. Heat can cause pressure build-up.

PRESSURE RELEASE INSTRUCTIONS:

WARNING

To safely release pressure in tank and avoid possibility of injury follow steps 1 through 4 COMPLETELY LISTED BELOW:

1. Place unit on its side with top directed away from you and with hose outlet on top.
2. Direct nozzle away from you and open shut-off allowing spray solution in discharge assemble and remaining air pressure to be completely exhausted.
3. Turn sprayer up right.
4. Remove pump (FOLLOW STEPS 1 AND 2 OF FILLING INSTRUCTION) while maintaining position of top of sprayer directed away from you.



CLEANING SPRAYER AFTER USE:

1. Rinse tank thoroughly with clear water.
2. Empty tank
3. Refill tank with clear water.
4. Check pump barrel to be sure no dirt or grass is stuck to barrel.
5. Place pump into tank opening and rotate clockwise until tightly locked and sealed in tank opening.
6. Disengage handle from locked position by pushing down and turning 1/4 turn counterclockwise to release handle.
7. Pump plunger up and down 8-10 strokes.
8. Open shut-off and allow water to run throughout to clean discharge assembly.
9. Release pressure (FOLLOW PRESSURE RELEASE INSTRUCTIONS).
10. Remove pump.
11. Empty sprayer.
12. REPEAT STEPS 1-11 IF NECESSARY.

SPRAYER MAINTENANCE:

1. Periodically remove nozzle and extension tube from shut-off.
2. With shut-off discharge hole pointing upward, place 6-8 drops of light oil into discharge hole then depress lever.
3. Piston cup should be periodically greased.
4. If nozzle clogs:
 - A. Remove complete nozzle assembly.
 - B. Disassemble nozzle.
 - C. Clean openings of any obstructions.
5. Never use any tool to remove pump if there is pressure in sprayer.

SPRAYER STORAGE:

1. Sprayer tank should be hung upside down with pump removed in a warm dry location.

2. Do not store or leave any solution in tank after use.

CAUTION: DO NOT ATTEMPT TO MODIFY OR REPAIR THIS PRODUCT EXCEPT WITH ORIGINAL MANUFACTURER'S PARTS.

TROUBLESHOOTING

Sprayer leaks at closure

LOOK FOR: 1. Sediment or foreign particles on surface of pump gasket or closure surface.

2. Chipped, torn swollen defective pump or closure gasket

REMEDY: 1. Clean all foreign particles from pump gasket and closure surface.
2. Remove old gasket and replace with new.

Sprayer material overflows through pump barrel or pump handle rises when handle is unlocked.

LOOK FOR: Sediment or foreign particles under check valve or chipped, torn, or swollen pump check valve.

REMEDY: Remove pump, clean check valve and pump valve seat if necessary.

Hose leaks at tank.

LOOK FOR: 1. Loose hose clamp.

2. Cracked hose

REMEDY: 1. Tighten hose clamp
2. Replace hose

Poor spray pattern, partial spray or complete stoppage.

LOOK FOR: 1. Spray extension, nozzle, or shut-off plugged

REMEDY: 1. Remove nozzle and clean.
2. Remove extension and clean.
3. Depressurize tank, remove lever and unscrew retainer from shut-off. Remove diaphragm and clean inside of shut off. See assembly and disassembly.

Hose leaks at shut-off

LOOK FOR: Swollen, split or faulty hose

REMEDY: Replace hose

Sprayer pumps hard

LOOK FOR: Plunger cup dry

REMEDY: Grease plunger cup

Sprayer pump does not compress air.

LOOK FOR: Damaged plunger cup.

REMEDY: Replace with new pump or rod assembly

Nozzle drips when spray control valve is shut-off

LOOK FOR: Dirt in shut-off valve or worn out diaphragm

REMEDY: Depressurize tank. Remove lever and unscrew retainer from shut-off. Remove diaphragm and clean inside of shut-off. Replace diaphragm if swollen or torn. Replace spring if broken. See assembly and disassembly.

Sprayer tank leaks

LOOK FOR: Evidence of spray material escaping tank.

 
REMEDY: Replace tank.

Syphon tube leaks

LOOK FOR: When spray shut-off valve is opened, tank air pressure is released through nozzle before tank is empty.

REMEDY: On stainless steel units -- replace tank. On plastic unit, replace removable plastic syphon tube. See hints below for plastic sprayer pump unit.

To release handle push handle down to depress coil spring and turn handle counterclockwise 1/2 turn, then lift handle.



To lock handle, push handle down to depress coil spring and turn handle 1/4 turn clockwise then allow handle to raise into lock position.

To dislodge pump barrel from cap, push the 2 ears forward and down through the cap. Make sure pump cup is well greased.