

D4000 Plus – D1000

Heavy Duty Hand Soap Dispensers



**EQUIPMENT & SERVICE
DIVISION**



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

D 4000 Plus



600101

D 1000



667301



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

Pump handle can be used with hand, wrist, or forearm

Multi-position pump allows control of amount dispensed

Constructed of anodized aluminum, reinforced nylon
and stainless steel

Dispenses all liquid and cream hand care products


For use in industrial environments

Corrosion resistant



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D10000

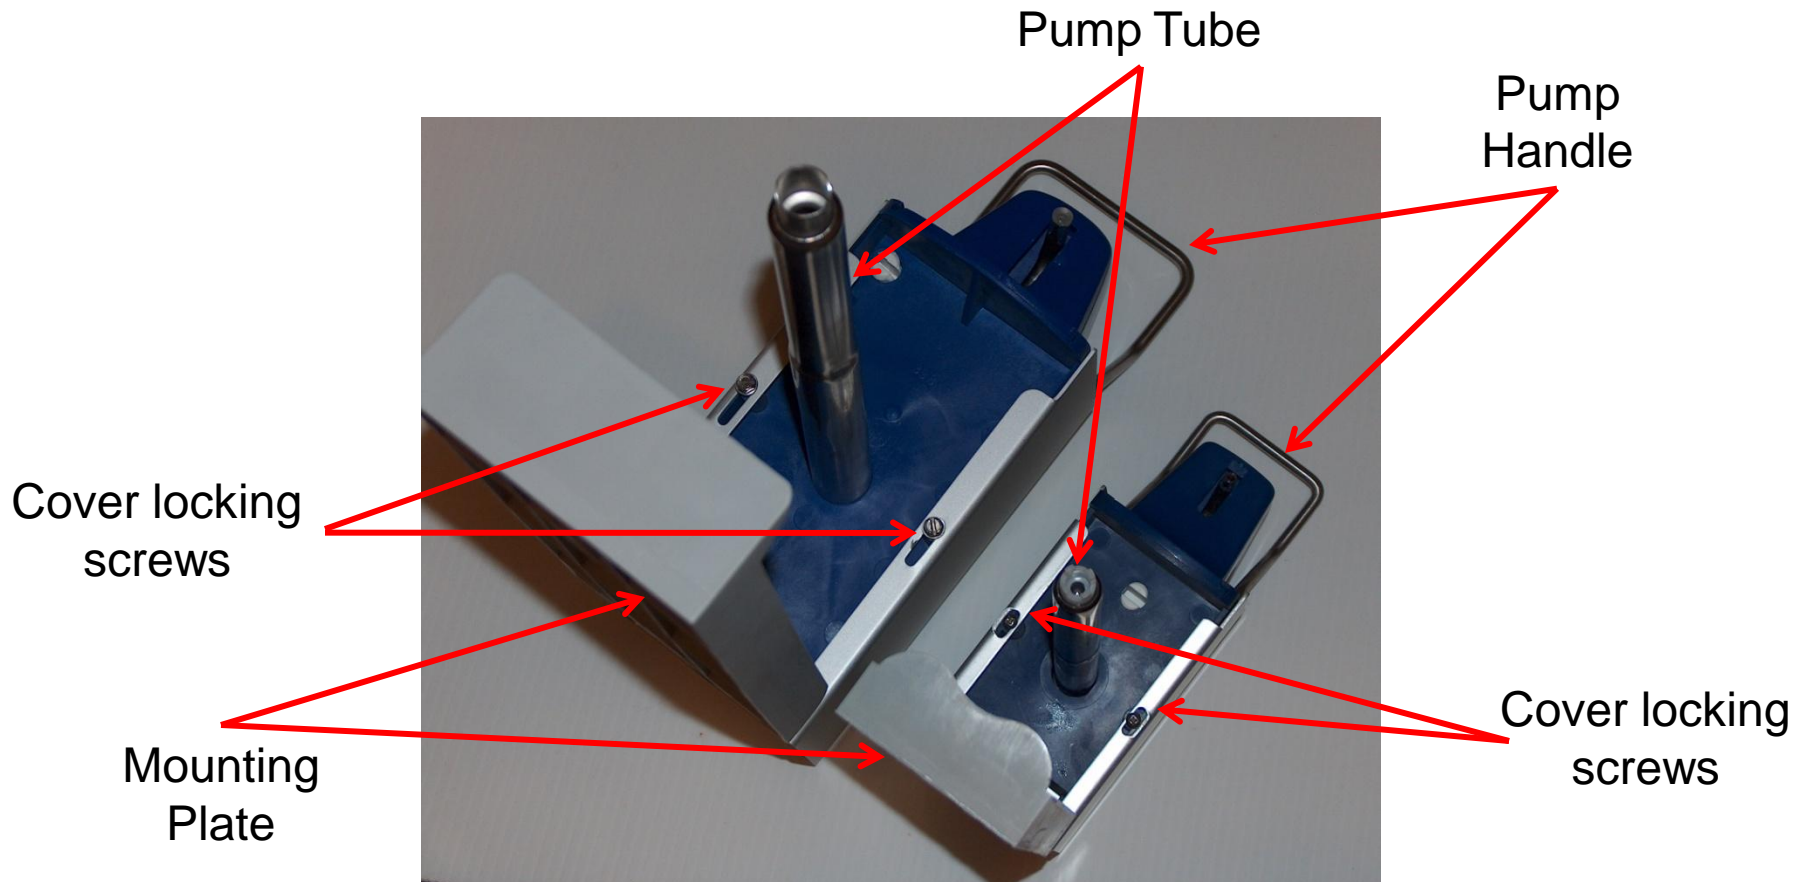



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D10000


Pump Handle

Spout

Pump Cover

Pump Tube

Mounting Plate


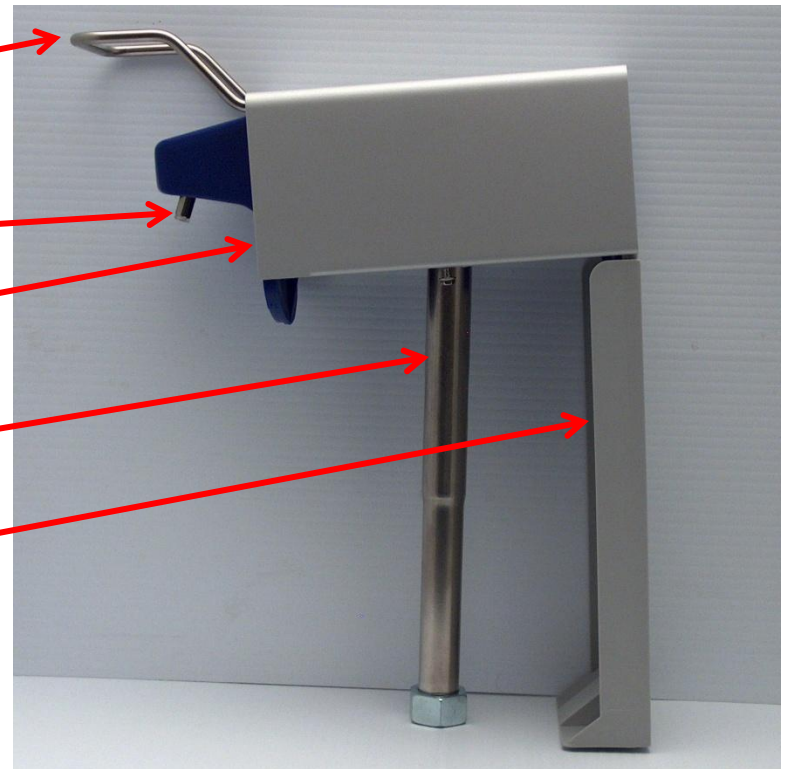




EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D10000

Pump Cover
and Mounting
Plate locking
Groove

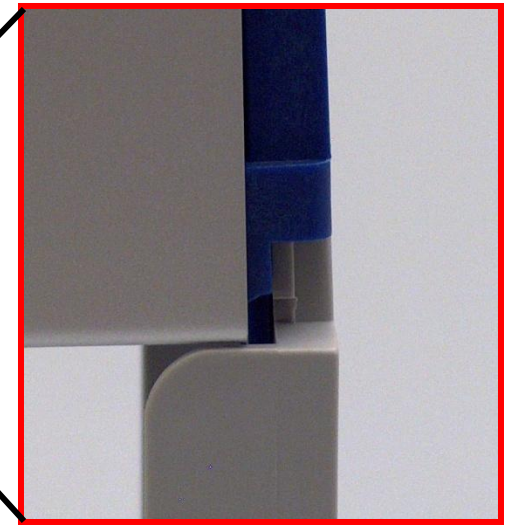
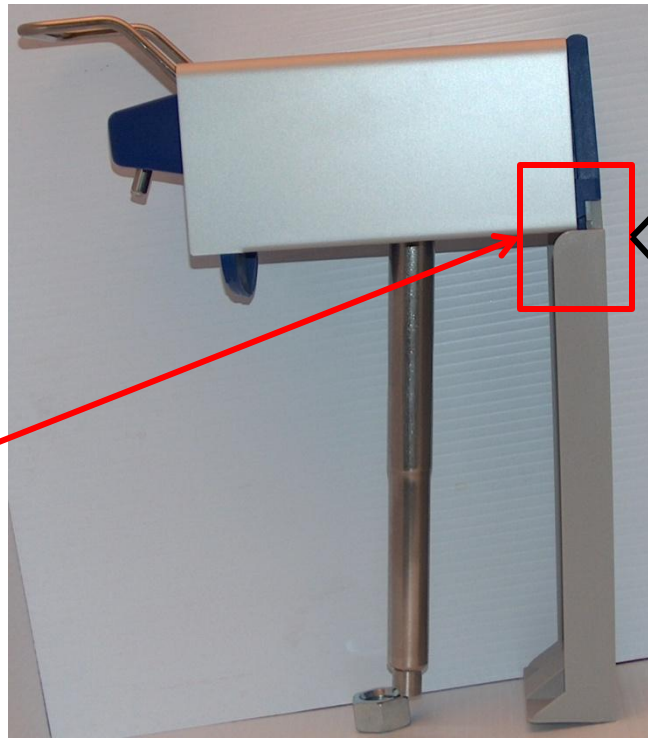




EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D10000

Rear View

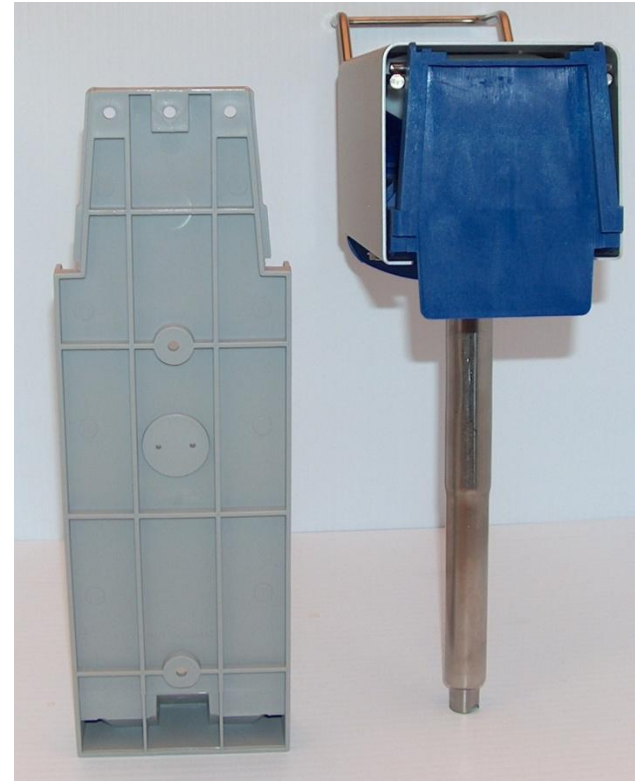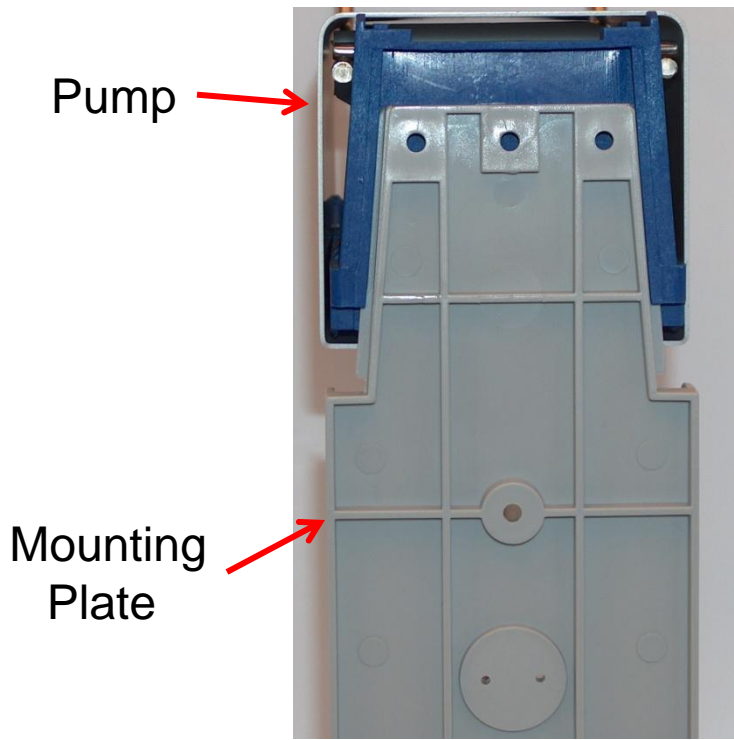

Mounting Plate

Pump



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

Mounting and Set-Up Instructions




EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D10000

1) Remove the Cover Locking Screws from the unit

Cover locking
screws

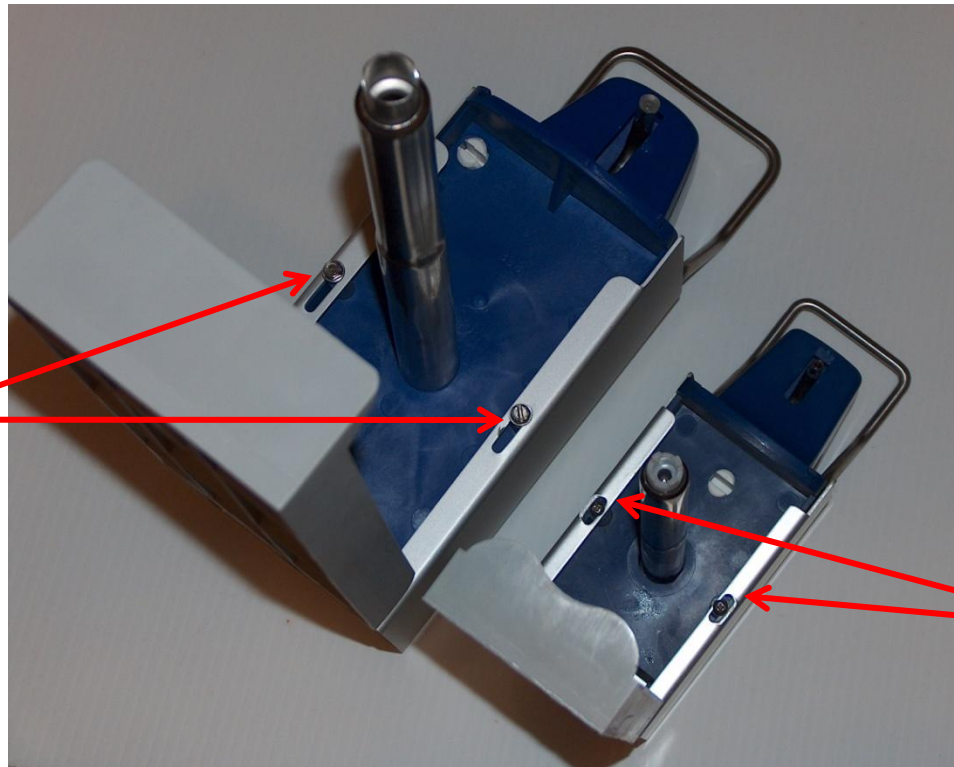

Cover locking
screws




EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D10000

2) Slightly depress the pump handle

3) Slide the cover about ½ inch forward to disengage the pump from the mounting plate


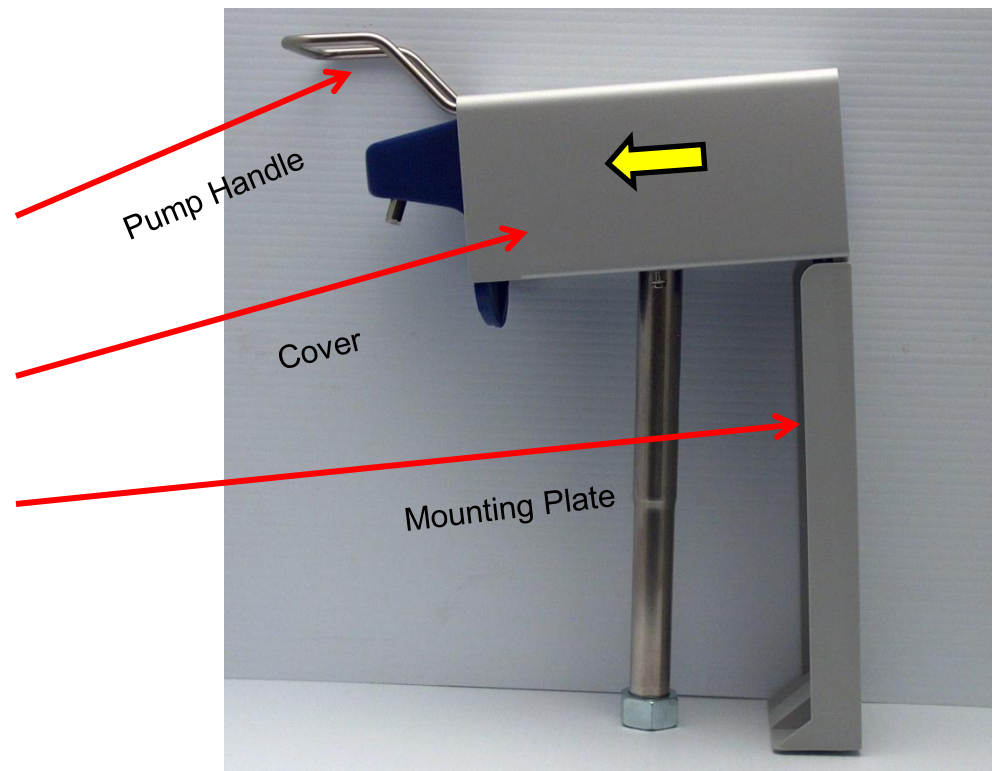




EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D10000

Pump with
cover
moved
forward

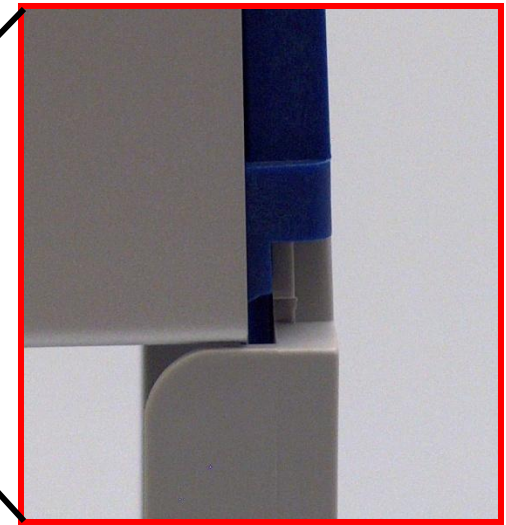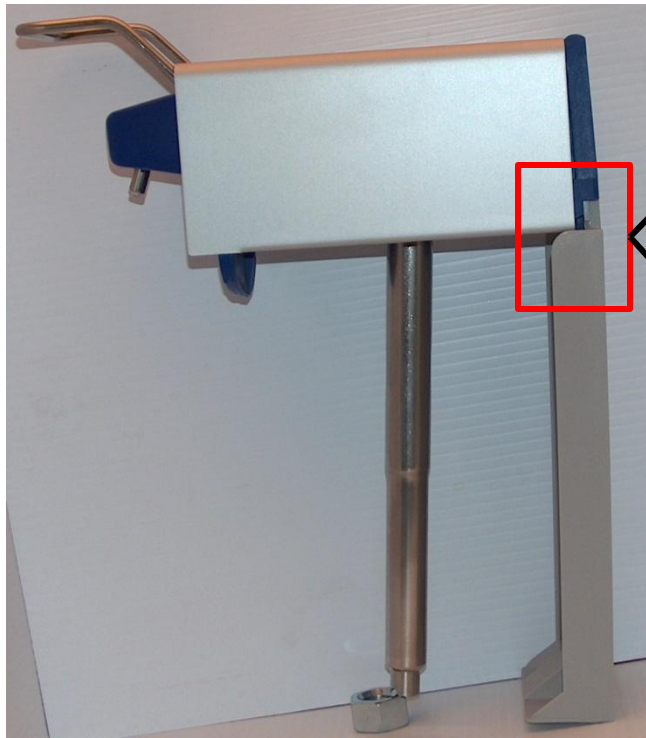



Cover and
Mounting
Plate
disengaged



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D10000

4) Pull Mounting
Plate straight down
to remove

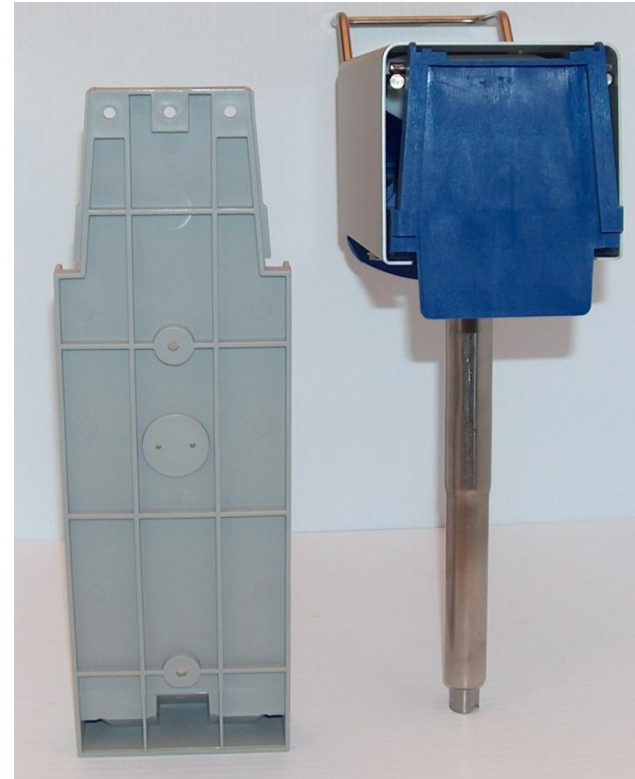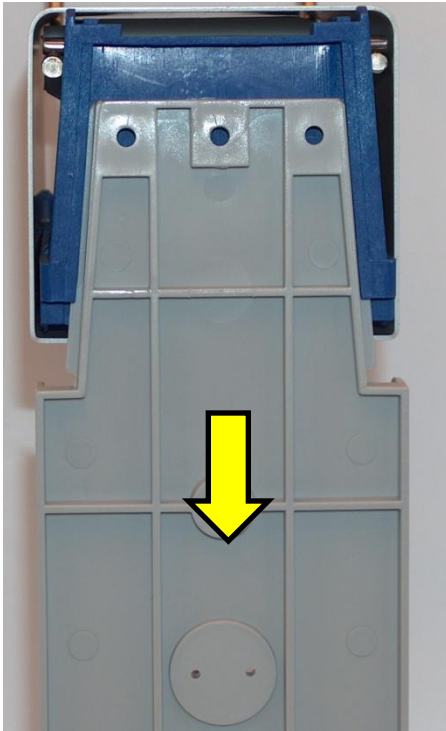

Mounting Plate and Pump
detached



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

Installation Instructions

Please view the
INSTALLATION VIDEO

located on the main page of the Zep Equipment web site

www.zepequipment.com

to learn how to properly mount your
D4000 Plus or D1000 units to the surface you are working with




EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

D4000 Plus

D1000

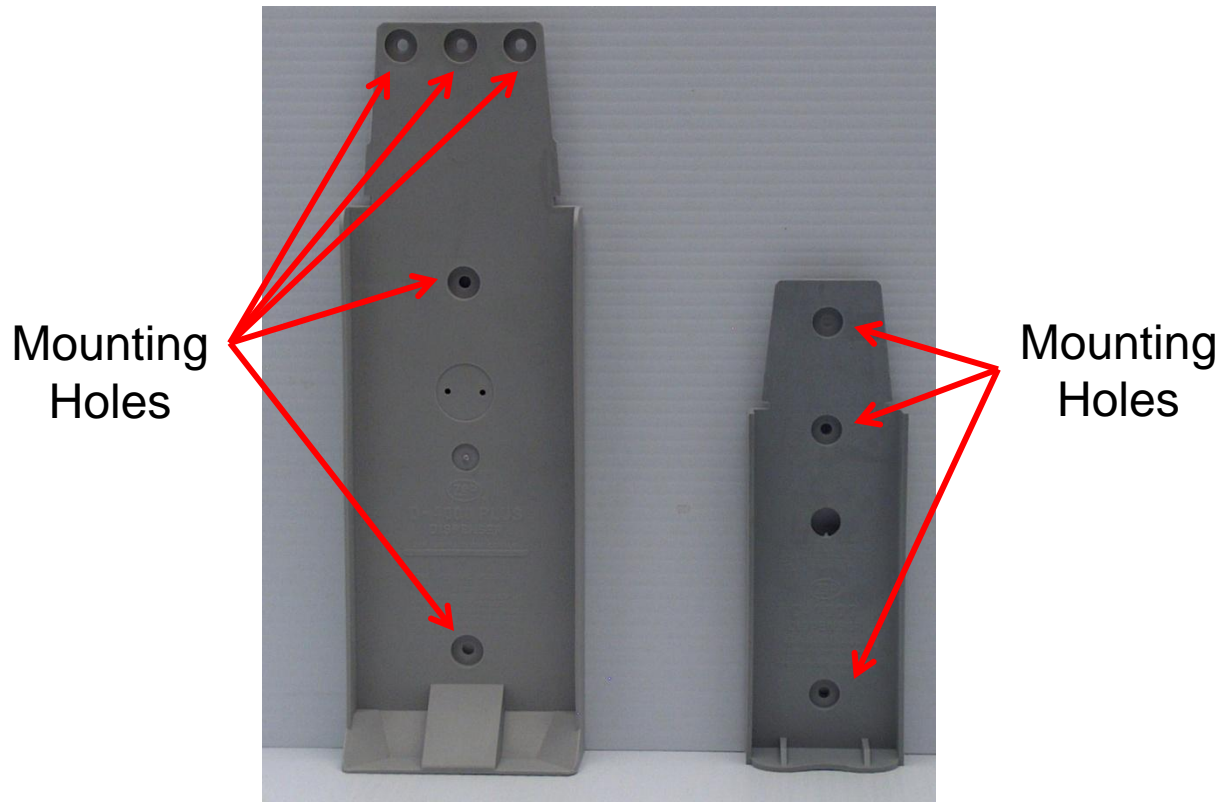


Because of the stress caused by pulling on the Pump Handle, **ALWAYS** secure the unit to the surface using **ALL** the mounting holes!



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

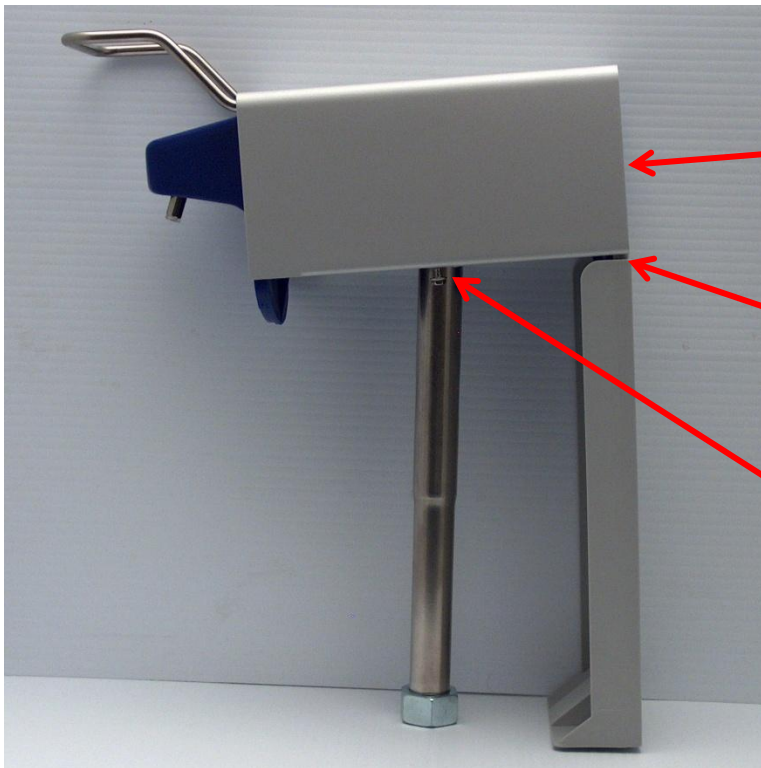

5) Slide Pump
Head Over
Mounting Plate

6) Slip Cover
Back to wall to
lock Pump Head
in Place


7) Replace Cover
Locking Screws
and tighten



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D10000

8) Adjustment Screw determines the amount of product to be dispensed with every pull of the handle

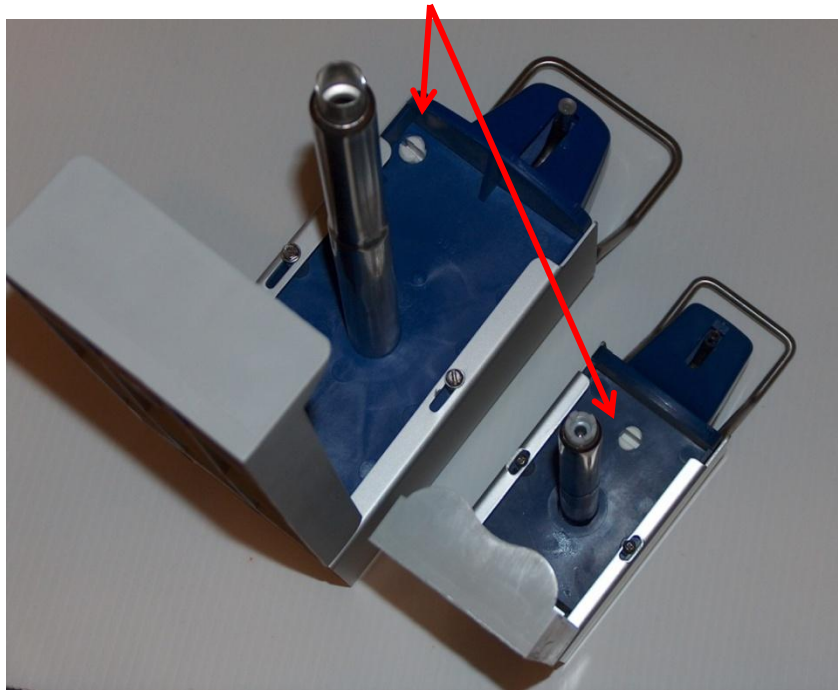

D4000 Plus comes out of the box set for the maximum amount per pump

Each $\frac{1}{4}$ clockwise turn of the Adjustment Screw lessens the amount by 25%

D10000 comes out of the box set for the maximum amount per pump

Turning the Adjustment Screw clockwise reduces pump amount by 12%

Turning the Adjustment Screw counter-clockwise reduces the pump amount by 25%



D4000 Plus – D1000

EQUIPMENT & SERVICE
DIVISION



Pump
Tube

D4000 Plus
One Gallon Bottle

9) Place product onto the dispenser by removing the bottle cap, sliding the bottle over the pump tube, and pushing the bottle onto the lip of the Mounting Plate



Pump
Tube

D1000
One Quart Bottle



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

When the product is in place,
pump the handle several times
to “Prime” the pump

**DISPENSER IS NOW READY
TO USE**



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

The Zep Products Made For The D4000 Plus And D1000 Are In Bottles That Are Proprietary To The Dispenser. Other Products May Not Properly Fit And Cause The Bottles To Fall Out Of The Dispenser!



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

Installation Instructions

Proper selection of placement for the unit



Mount unit below eye level to avoid product possibly getting into eyes



Mount as close to the sink as possible



Make sure D4000 Plus has at least 16 inches clearance below the unit to allow for bottle replacement



Make sure D1000 has at least 9 inches clearance below the unit to allow for bottle replacement



Never place unit next to electric hand dryer, the excessive hot air could damage bottle and or product



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

Installation Instructions

Always use ALL the mounting holes

Always use the correct mounting hardware



View Installation Video to see what hardware is needed for the surface you are mounting the unit to



EQUIPMENT & SERVICE
DIVISION

D4000 Plus – D1000

Products Manufactured For The D4000 Plus And The D1000

Hand Cleaners

-  Heavy Duty
-  Light Duty
-  Liquid
-  Cream
-  Abrasive
-  Non-Abrasive
-  Specialty Products
-  "Green" Products

Hand Sanitizers

-  Alcohol
-  Non-Alcohol

Hand and Body Lotions